

How to Properly Close a Tank Car Manway

Follow these steps to ensure leak-free performance of a hinged & bolted manway




It is the shipper's responsibility to ensure there are no contents of the tank car leaking from the manway before it is shipped.

Eliminating leaks around a hinged & bolted manway protects against the risks to life, property, & the environment.

By following these steps, an operator can achieve a consistent, high-level, process of assembling a hinged & bolted manway.

Hinged & Bolted Manway Nomenclature Illustration

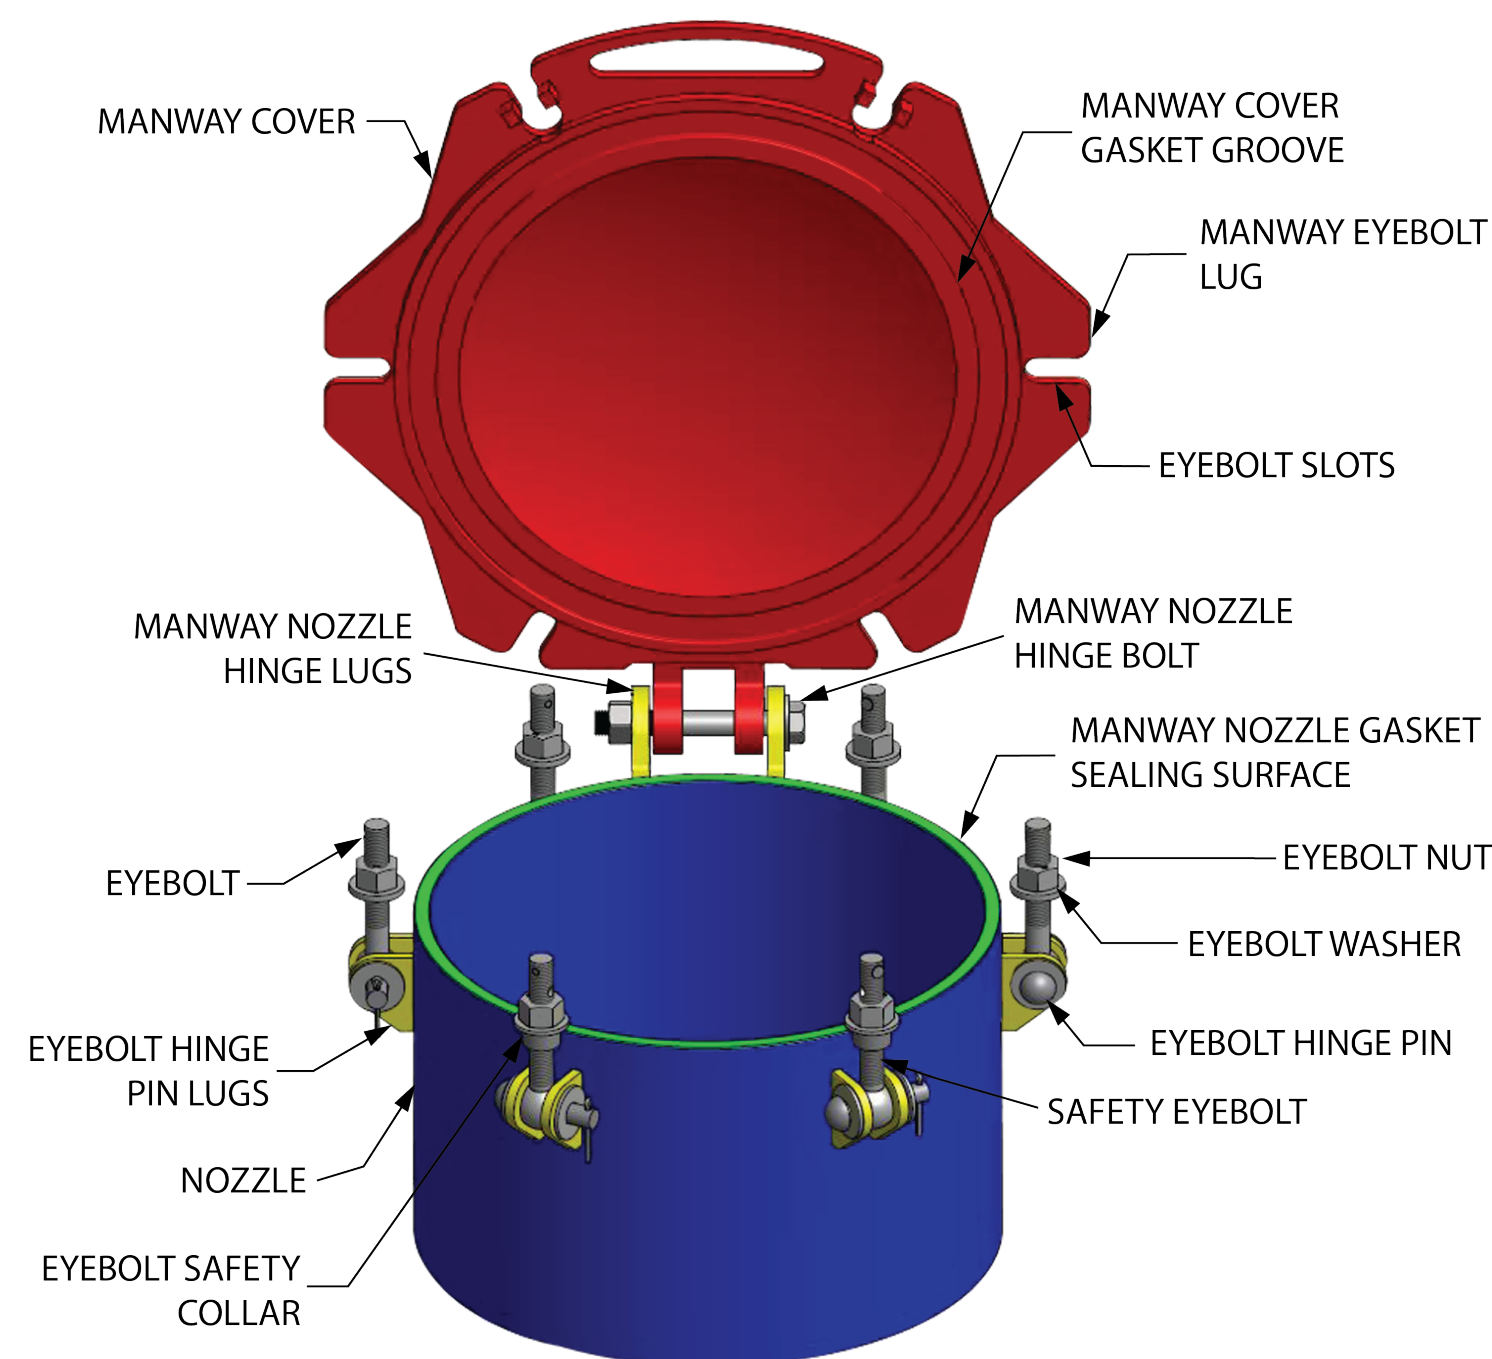


The key to eliminating NAR's around a hinged & bolted manway requires a high-level process of assembly to ensure leak-free performance over a broad range of temperatures & pressures.

Common elements to consider when assembling a hinged & bolted manway include:

- Gasket-contact surface finish without unacceptable imperfections
- Suitable gasket
- Maintaining sufficient contact pressure on the manway cover, manway nozzle, & gasket surfaces (i.e., gasket stress)
- Condition of the eyebolt
- Maintaining sufficient contact pressure must consider the maximum & minimum temperature range & the internal pressure the joint may experience in service
- Bolt stretch, or relaxation, or gasket relaxation, or flow, may result because of changes in temperature & pressure
- Mechanical failure of an eyebolt may result from corrosion, fatigue, galling, self-loosening, stress corrosion cracking, & wear

1. Inspect the Manway Area

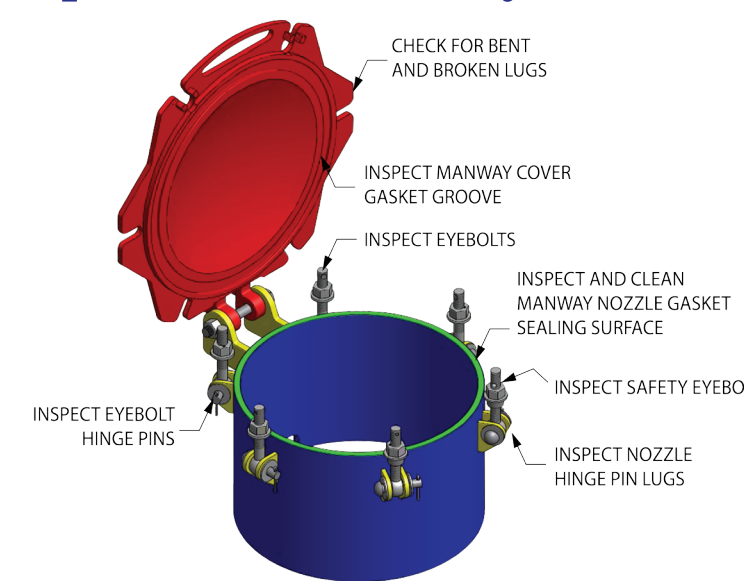

- Examine the bolted manway cover for imperfections, bent & broken lugs, damaged manway gasket grooves, & detrimental residue on the gasket & sealing surfaces.
- Inspect the manway nozzle for imperfections.


2. Clean, Examine, & Install New Gaskets



- Clean as necessary to observe imperfections.
- Replace gaskets that have indications of abrasion, cuts, tears, or other damage that may affect the fluid sealing capability.
- When there is a need to replace a gasket, remove the gasket from the manway cover and inspect the gasket-contact sealing surface on the cover.
- When transporting a flammable liquid consisting of a mixture or solution having different compositional elements, it is important to choose a gasket material compatible with each element. Replace with gasket suitable for service. Gasket selection should also consider cyclic service conditions.


Download the entire 'Guidelines for Hinged & Bolted Manway Assembly - Flammable Liquids' at www.EthanolRFA.org/manwayguidelines

3. Inspect & Lubricate the Eyebolts

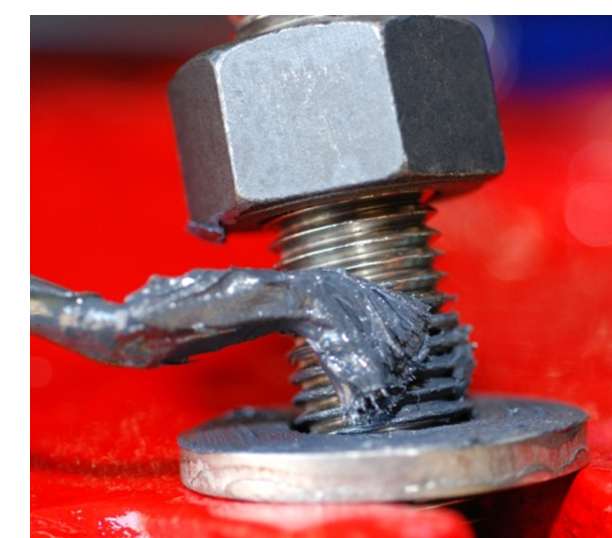

- Examine eyebolt threads and hinge pins.
- Examine each nut to ensure same design. Replace nuts that are broken, cracked, missing or rounded.
- Use a proper lubricant on the eyebolts, safety eyebolt(s), & bearing surface of the nuts. Ensure the lubricant is compatible with the product.

4. Identify Eyebolt Number & Tightening Sequence

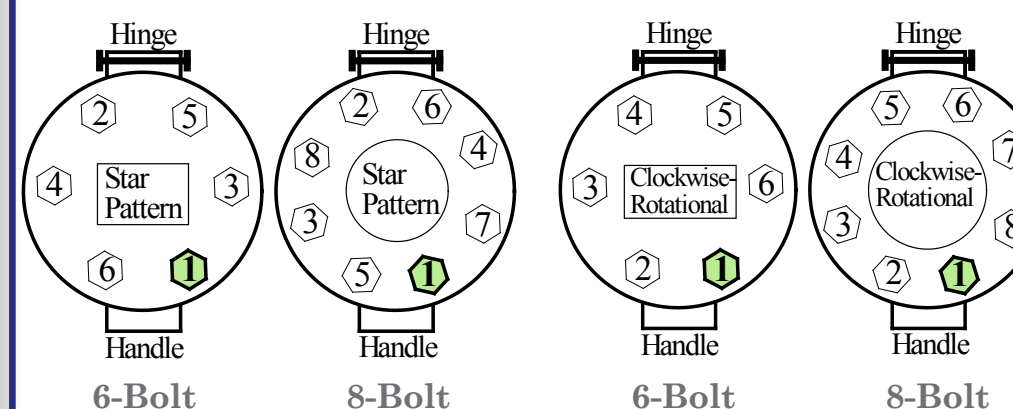

- Recognize the numbering of the eyebolts beginning with the safety eyebolt near the right side of the lifting handle.
- Follow the numbered sequence in a star pattern when tightening each eyebolt on to the manway.
- Select a proper tool with appropriate torque setting.

5. Preferred Torque Sequence and Value

Sequence	VSP CYCLETIGHT® or Hard Gasket		SALCO Nozzle or Elastomeric Gasket	
	6-Bolt	8-Bolt	6-Bolt	8-Bolt
Snug Pass (Star Pattern)	Snug	Snug	Snug	Snug
1 st Pass (Star Pattern)	75 ft-lbs	70 ft-lbs	50 ft-lbs	45 ft-lbs
2 nd Pass (Star Pattern)	160 ft-lbs	140 ft-lbs	80 ft-lbs	70 ft-lbs
3 rd Pass (Star Pattern)	250 ft-lbs	200 ft-lbs	115 ft-lbs	90 ft-lbs
4 th Pass (Clockwise/Rotational)	250 ft-lbs	200 ft-lbs	115 ft-lbs	90 ft-lbs

- **ALWAYS** use approved fastener lubrication on threads and nut bearing surface.
- **ALWAYS** start with the #1 bolt.
- **DO NOT** use a **PIPE WRENCH**, this will under torque, resulting in a leak.
- **DO NOT** use a **CHEATER BAR**, this will over torque, bend the manway cover and, result in a leak.



The information contained herein, though believed to be accurate at the time of publication, should not be considered as legal advice or as a substitute for developing specific company operating guidelines. The authors make no warranty, expressed or implied, or assume any legal liability or responsibility for the accuracy, completeness, or applicability of the information presented in this document.